

Evidence Presentation System - Control Panel

1

SEND TO JUDGE: When this button is pressed the current source selected from the source menu is going to be routed to the Judge's monitor for approval.

SOURCE MENU: Press button to display all functions and controls available for the source selected.

LECTERN ANNOTATE: Press button to toggle between annotation on and off. While this function is engaged, presenter can annotate on tablet by using the pen for annotation. Witness can annotate on monitor by using his finger as a pen. The annotation feature applies only to the current source displaying at the projector.


ROOM SETTINGS: Press button to have access to projector power control and screen control.

SYSTEM POWER: Press this button to power on and off evidence presentation cart.

2

SEND TO ALL: Once the evidence is approved, this button can be press to send the current source selected from the source menu to all displays.

STOP VIDEO: This button can be used to stop all video that has not been approved. Video is restored by pressing this button again.

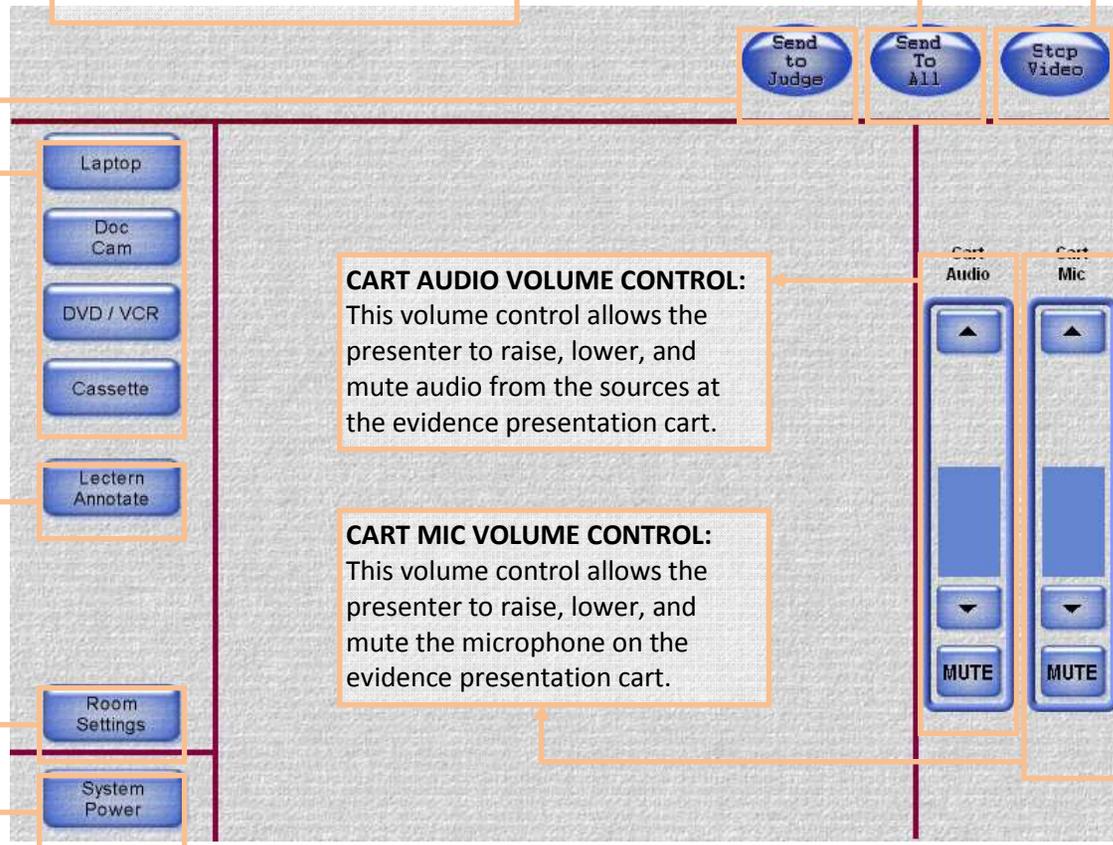

CART AUDIO VOLUME CONTROL: This volume control allows the presenter to raise, lower, and mute audio from the sources at the evidence presentation cart.

CART MIC VOLUME CONTROL: This volume control allows the presenter to raise, lower, and mute the microphone on the evidence presentation cart.